User manual
GSM Mobile Phone
Model P5 Mini

Contents

Appearance and Keypad Operations 3
Using Memory Card as U Disk 4
Wifi 5
Bluetooth 7
Mail 8
Dialling 10
Messaging 13
Contacts 14
Internet Explorer 16
Widgets 17
Recorder 18
Clock 19
Calculator 20
Camera 20
Images 22
Music 24
Calendar 26
FM Radio 27
Settings 28
Specifications 36
DECLARATION OF CONFORMITY 39

Appearance and Keypad Operations

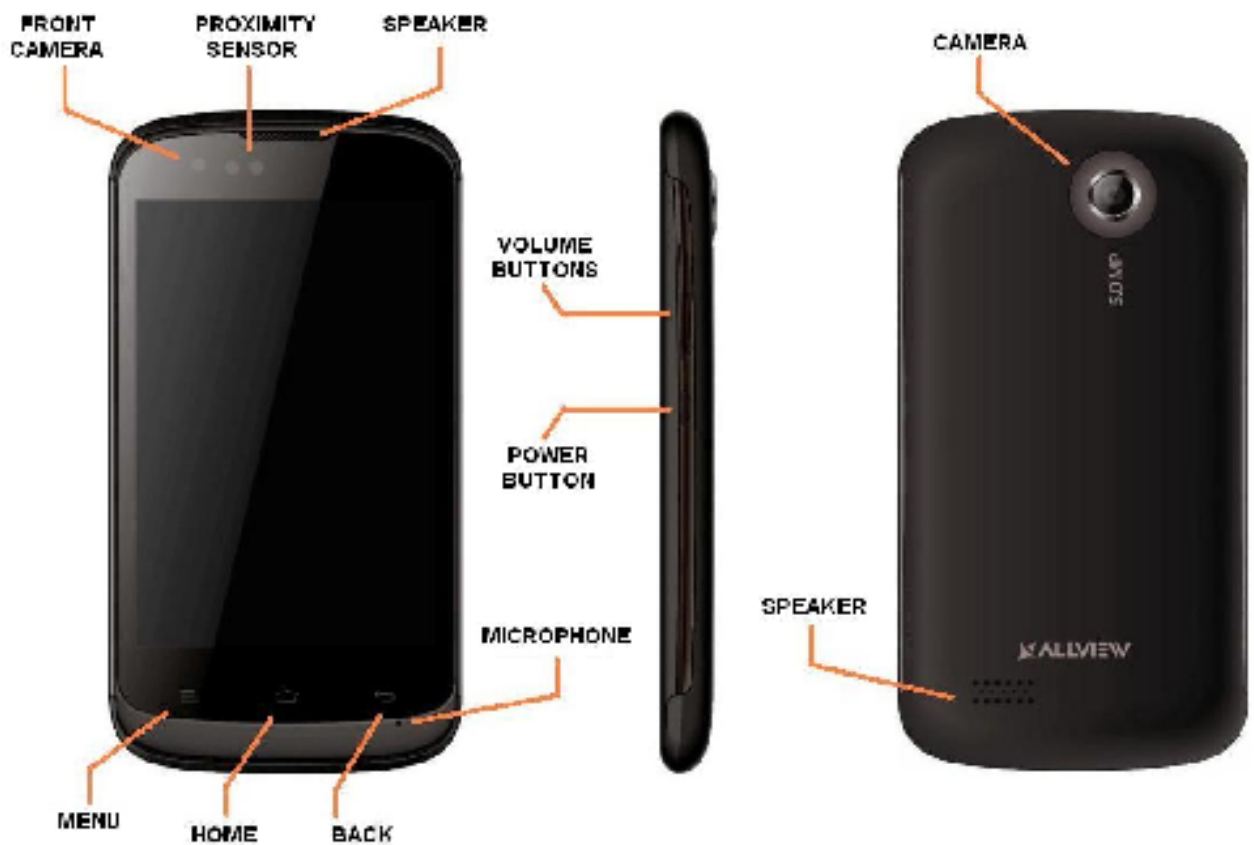

Using Memory Card as U Disk

If you want to send music, pictures or other files to the phone's memory card from the computer, you should set the connection as usb storage.

Set memory card as u disk

Connect the phone to the computer with USB cable. The notification icon will appear in the status box.

Open the notification panel.

In the notification panel, touch USB connected then check the "usb storage" option.

Notices: If you connect your phone to the computer then choose open the USB device, the phone can't read the memory card. You temporarily can not use some applications, such as camera.

Uninstall the U Disk from computer

To do this you have to uncheck the "usb storage" option.

Wifi

Wi-Fi provides as far as 300feet (100M) range of wireless network access. If you use cell phone to connect wifi, you should connect to the wireless access point or hot spots .

Notices: The availability and coverage of Wi-Fi signal depend on the number, infrastructure and other objects penetrated by the signal.

Press Home>Menu>Settings>WLAN and slide the wi-fi switch to activate Wi-Fi. Phone will automatically scan for available wireless networks, then a list of Wi-Fi networks will show the founded network name and security settings. (open network or WEP WPA/WPA2 with password). If you enable the notification in Wi-Fi settings, the status box will show an icon when open available wireless network found.

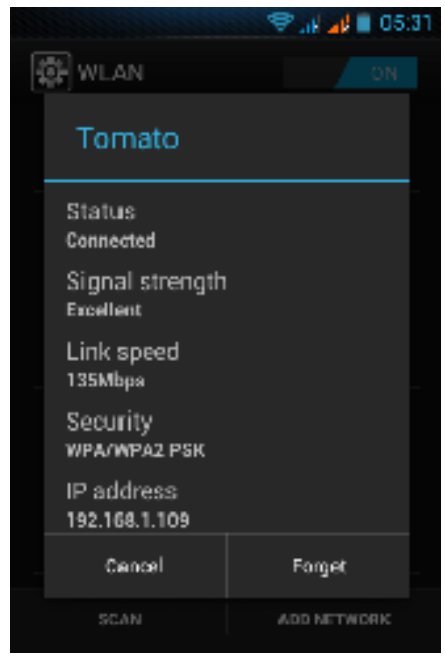

Touch one of the Wi-Fi choices to connect the network. When you choose open network, phone will connect to it automatically. If you choose WEP WPA/WPA2 with password, you should type the password first, then touch to connect it.

Notices:when the phone is connected to the wireless network, the status box will show the Wi-Fi icon , and the approximate signal strengthen (the number of lit bars). If touch the connected network will display the name of Wi—Fi network, status, speed, signal strength, security and IP address.

If you want to delete the wireless settings, please touch "Forget" as in the right picture. If

you want to connect to this network, you should re-enter these settings.

Notices: unless you choose not to reserve the network, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, phone needn't to perform additional steps to connect Wi-Fi networks.

Notices: unless you choose not to reserve the network with password, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, phone needn't to perform additional steps to connect Wi-Fi networks.

Connect to other Wi-Fi networks

Touch other Wi-Fi networks, and then you can connect to this network.

WLAN Direct

You can use WLAN Direct to quickly transfer files through Wireless Connection.

To activate WLAN Direct, open the applications menu, touch Settings -> More -> WLAN Direct.

Notice: If you activate WLAN Direct, you will be disconnected from any other network that you are connected to.

To transfer a file from the Gallery you must open the file that you want to transfer, press the sharing symbol ( ) then select Wifi-Direct. The device will scan for available WLAN Direct enabled devices and show a list. Select the desired device on wich you must accept the transfer, and the file should now transfer through WiFi Direct.

Bluetooth

Turn on Bluetooth or set the phone can be detected

Press Home>Menu>Settings.

Slide the Bluetooth switch to activate, then touch Bluetooth box to open the Bluetooth function. After started, the status box will show this icon ( ). Device scanning starts automaticaly. All the devices founded will display in the list under the icon.

Touch Menu button to access settings for bluetooth connection.

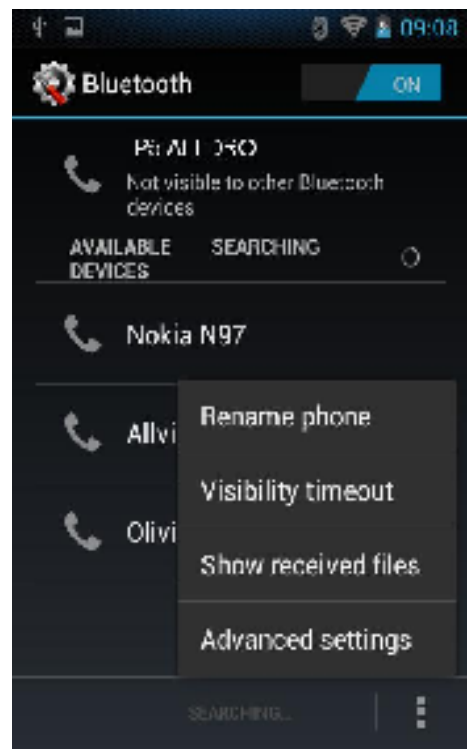

Important: the minimum detecting time of the phone is 2 minutes.

Pairing and connection of Bluetooth headset

1) Press home>menu, then touch settings.

2)Touch Bluetooth>your phone will scan for the Bluetooth devices within range ,and show the founded devices in the list under the icon.

Tips

If the list can't find your equipment, touch Search for devices to re-scan it.

Make sure that the devices wanted are under the detected mode.

1) Touch headset in the equipment list to finish the connection.

Notices: generally Bluetooth devices need password to be paired, often use 0000 as the default password.

2)The pairing and connecting status will show under the headset in the Bluetooth devices list. When the headset connected to your phone, the status box will show this icon means connected. Then you can use the headset to make or receive callings..

Cut the connection to the Bluetooth

Press Menu>Settings> Bluetooth.

In the list of Bluetooth equipment, touch the connected hand-free headset.

Press and select OK.

Mail

5.1 Gmail

Create an electronic mail account

Select mail> You can activate or edit existing e-mail accounts as well as create a new e-mail account.

Select mail, Google account setting interface appears. Then touch‘next step’> create account>enter name last name and e-mail account.

Google servers determine whether the name can be used, if so, new interface appears prompting enter password, then judge the password' security, users who doesn't meet the requirements need to re-enter the password.

Successfully register a new Gmail account, a messenger created automatically for testing.

Load mail account

a. Open Gmail skip introduction screen>loading interface appears >select load

b. Enter name, password then load

E-mail account initialization ,prompting "login successful" All Google accounts will be synchronized.

Create and send e-mails

When creating mails, select mail > creating mails. Enter the address(recipient) theme and contents. Press MENU you could 'append' 'Add Cc/Bcc', select send or discarded.

Receive mails

There is tone for new mails, in the status box will show an message symbol.

Delete mails

When loading a mail account if you want to delete it you need to restore factory settings . When loading a second one you could press the menu button to delete it.

Notices: many functions depend on Gmail Account for example Electronic Market Google Talk Sync Contact and Calendar.

5.2 Email

Load Email

Enter the correct address and password >settings correct port and POP server, check the server settings automatically.

Set the correct SMTP server, check the mails server's sending and receiving settings, then enter the specified account name and displayed name on the outing e-mail.> Finish.

Create and send mails

When creating mails, select mails > create mails. Enter the address(recipient) theme and contents. Press MENU you could 'append' 'Add Cc/Bcc', select send or discarded or save as draft.

Dialling

When the icon of GSM Signal appears in the notification, you could dial or receive callings. The signal bar on the top right corner show the strength of network signal (the maximum with 4 signal bars) .

Start dialing

Open application's Main menu>Phone. You can choose SIM1 or SIM2 after you enter the number and touch the call button.

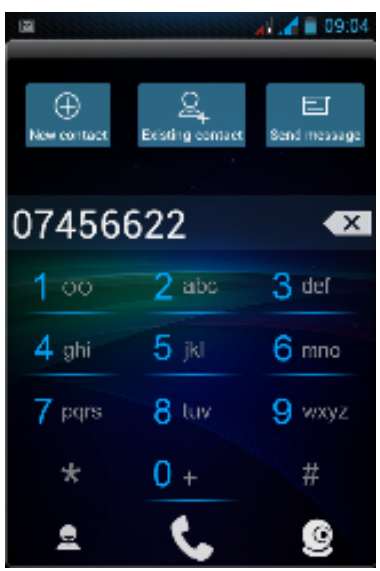

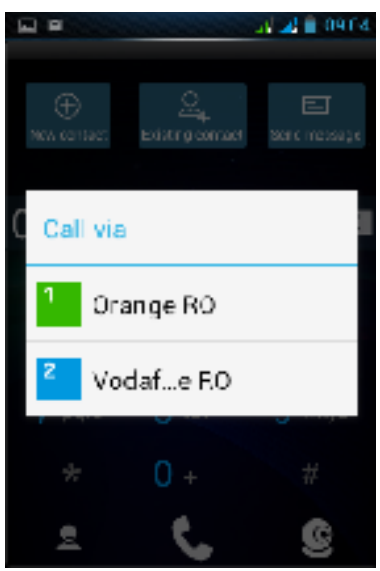

Dialing

At the interface of “dialer” enter the phone number and then click the dialing key.

Telephone calls in the call log

Every telephone number called and received in “SIM1 or SIM2” will be reserved in phone’s menu of call log. On the bottom of every call record will show wich SIM card was involved in the call.

All numbers in the call log can be dialed by clicking the respective number and then “Call 07xxxx”.

Receive callings

When calling comes top left will show from which SIM card press“Answer” and slide towards right until the middle button, then you can receive callings.

Proximity sensor

According to the distance between phone and human body it will adjust automatically the switch of the backlight.

During the call, close the phone to the ear, the backlight will turn off automatically which could save batteries and prevent inadvertently touching.

Refuse to answer the phone

When standby, calling comes press “refuse”button and slide towards left side until the middle button, then you could refuse the calling.

When using,calling comes,click on the “refuse”button to refuse the calling.

Telephone recording

During the call More>Audio recordings you could record the dialog of the call.

1 In dialing screen touch Menu>Call settings>Voice call, you can set other functions of the call for example Call Forwarding– after all the settings finished and turned on you could transfer the call to a certain number.

2 In dialing screen touch Menu>Call settings>Voice call>Additional settings, open “Call waiting”.After turned on you can receive another call when already exist one The answering and rejecting functions are just like the ordinary phone.

Video call

When you use video call, ensure to install 3G SIM card. In the dialing interface,enter numbers ,then press the menu button and “Video dial”. In the Contacts interface touch the desired contact icon and then touch the video calling symbol.

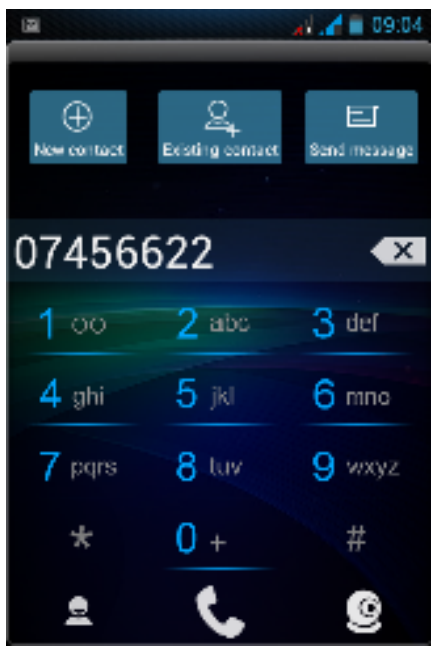

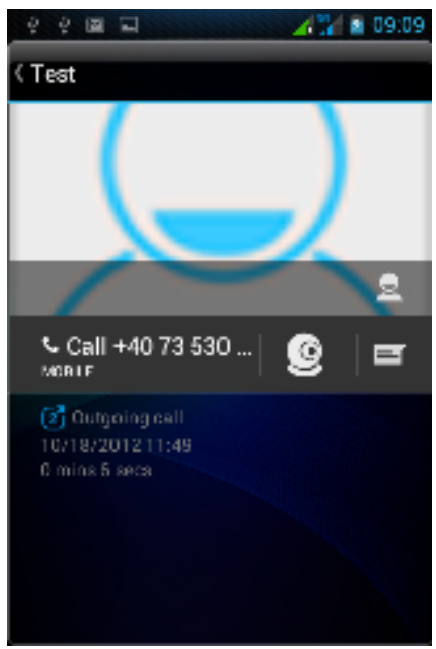

Messaging

Important the message title of this phone is the phone number will be reserved in s similar for of dialog instead of the usual folder structure.

Send SMS to certain phone number

Press home>messaging> touch“new message” symbol.

Click “recipient”box to start input method and enter the phone number or contact.

Click the Send button and select the SIM card from wich you want to send the message.

Send MMS to certain phone number

When creating message it was defaulted as SMS and it will be turned to MMS when you attach some multimedia content. You can send MMS via clicking “send” symbol after editing.

In the edit interface press the attachement symbol and select the multimedia files you want to be sent as mms.

Send messages to multiple numbers

Enter multiple numbers in the box of entering each number is divided by the comma in English.

Notices: For now this phone can mass messages to almost 20 numbers the correct number depends on the characters you can only enter 312 characters in the box of“recipient”.

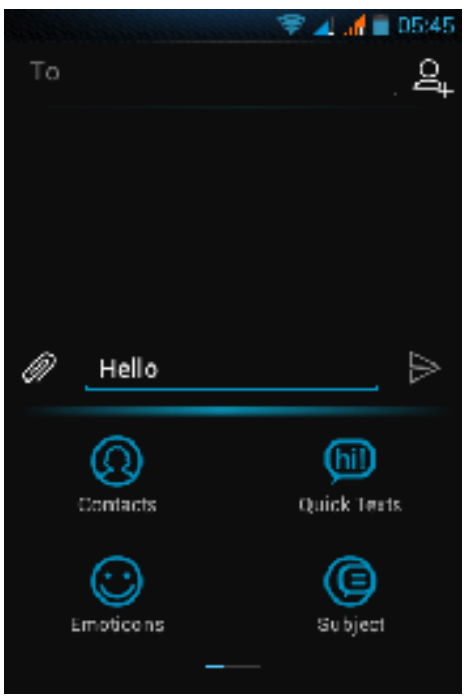

When a message is sent or sent again a little yellow letter will appear. The number 1 or 2 on the letter refers to SIM1 or SIM2.

When message sending failed a red triangle with exclamation will appear.

Contacts

Open the menu of applications> Contacts

Default display phone contacts and SIM card contacts, sort contacts by first letter of alphabet.

Click the Search icon to enter the contact search interface

Click the "+" to create new contact

1. Contacts>touch the NEW CONTACT icon on the bottom of screen

Select Save contacts to phone or SIM card ,then into the interface of editing contacts

You can edit the contacts' picture, name, phone number, e-mail, postal address, then touch Done.

2. Contacts>Search

a. Enter numbers or letters, if match with contacts ,they will be displayed in the search results.

b. If there is no search to match the contacts, the interface will be None found.

3. Contacts>Menu>Delete Contacts

a. You can select all, click the delete button to delete all contacts, including the contacts of phone and SIM card

b. You can select one or more individual contact, click Delete, delete all the selected contacts.

4. Contacts>Groups icon on top-left side of the screen

Select Add Groups, edit the new group name, and add the group contacts names.

6. Contacts>Menu

Click Import/export, In the local phone, SIM card and SD card three copies of each other to achieve contact information.You can select "Copy Source" and then select Next, select the contacts to copy, so shat complete the copy of contacts.

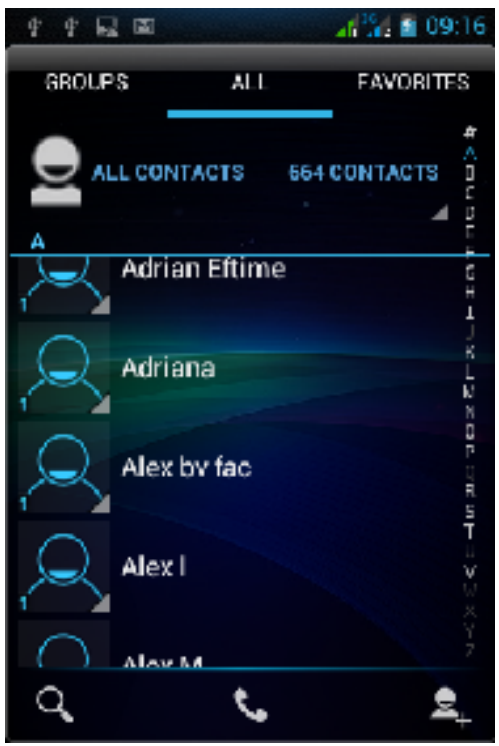

In the interface of Contacts>All, click on All Contacts and select the visible contact source: all contacts, sim 1, sim 2 or customize.

The interface of contacts press the search symbol

a. Enter the first letter of the names in the list to find the matched contact.

b. Enter the first number in the searching box to find contacts named under numbers.

c. Enter the exactly matched numbers with contacts in the searching box, then press the “search” button.

d. If there is no matching contact, then the interface will appear None found

Internet Explorer

Internet explorer

1)In the interface of internet explorer touch address filed and enter the URL.

2)Use keypad to enter URL. The appropriate web sites will appear on the screen. You can touch it directly go to the page or continue to enter URL.

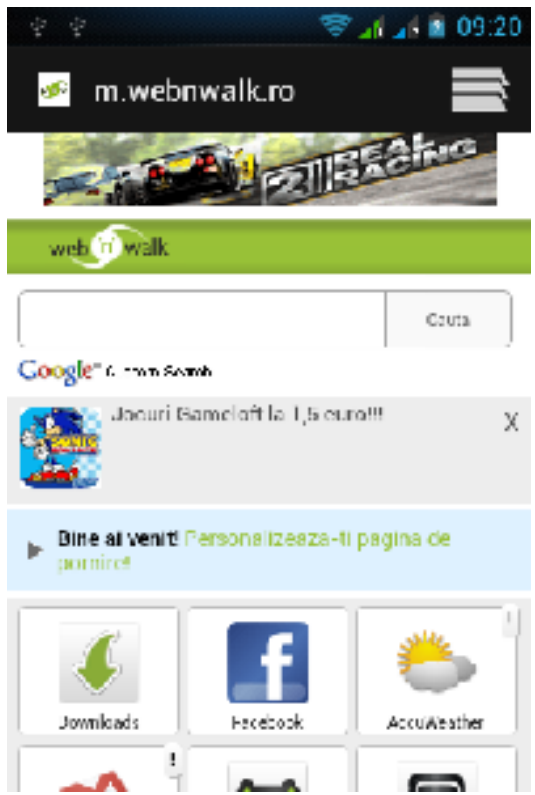

Homepage

The Homepage will load when you start the web browser.

Functions of menu

Menu>Forward

After browsing through multiple pages, will move to a web page after the current page.

Windows symbol

You can view all open windows to the current.

Menu>Save to Bookmarks

Click to make the current URL as a bookmark saved.

Menu>Bookmarks/History

View, add and manage the bookmarks

Menu>Find on page,search what you need in current page.

Select text,in the text, click and drag to select a piece of text.

Menu>Setting,containts a variety of browser settings.

Widgets

You can customize the main screen widgets and shortcuts to favorite applications. To add widgets or shortcuts in one of the main screen press Menu and select "Add". At the bottom of the screen you can choose one of the "Applications", "widgets" or dedicated shortcuts.

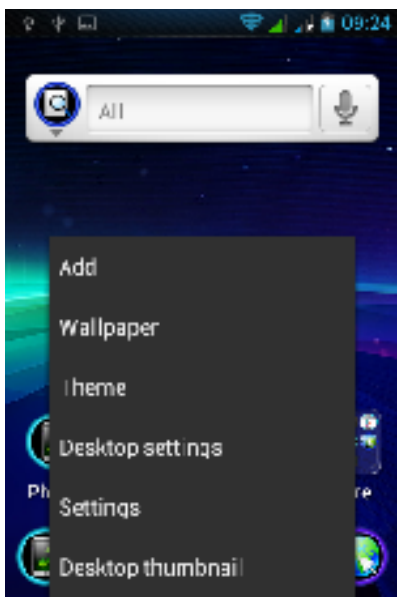

Recorder

Recorder can record voice, and send it quickly via Bluetooth or Messaging as well as make it as ring tone.

Notices: recorder can only save the audio files as amr., 3gpp., ogg. File format.

1) Click the recorder application.

2) Keep the phone's microphone near the voice source.

3) Click recorder to record voices ,and click to stop or playback.

All recordings save in Playlists > My recordings folder in the default music program.

Clock

Open the menu of application, click Clock.

In the interface of Clock, you can find several functions:

1. Alarm: you can set several alarms
2. Timer: clockwise timer
3. Watch: stopwatch
4. Time: world clock

Alarm

After functions set phone will arrives in the setting time to alert you by ringing or vibrating to achieve it's function. Press Menu to add alarm you can also add it from the adding interface. You could set the alarm according to your needs. In the interface of alarm will show two closed alarms, on for week days and one for weekend.

Edit

You can edit the current alarm. Also you can edit time ringing tones vibration repeat form and tabs.

In the interface of alarm settings, you could perform the operations of changing time, repeat days, ringtone, vibration and label.

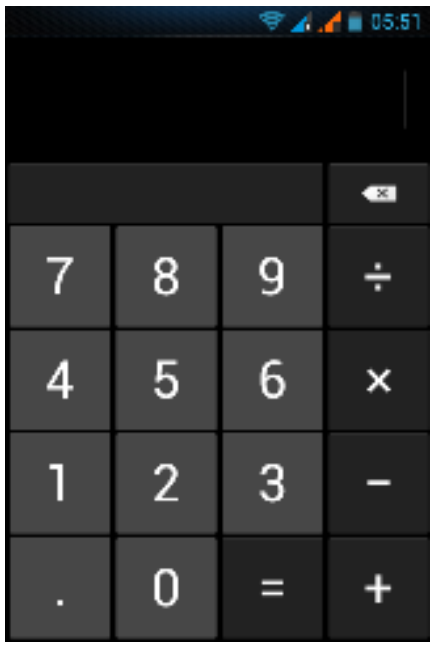

Calculator

This function can turn your phone into calculator it can do some simple calculations.

Touch the number keys to make it appear in the blank box.

In the interface of calculator, press MENU button or hold down the screen to the left, then the senior panel appears.

Camera

1. Photo camera

Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in memory card.

Open camera

Press home, touch Menu, select Camera. Choose the video mode if you want to make videos.

Take pictures

1 Aim your object with the screen.

2 Touch the “shutter” button on the screen.

3 After taking photos will save to the camera’s gallery folder with the name of taking time and date.

4 You can view the photos by touching the preview box button.

5 Camera settings:You can touch the icon of “set” in the top-left side of the interface of camera to do the settings.

On the bottom right of camera viewfinder mode, display the preview of the previous picture. Touch preview box, the photo display on full screen and you can enlarge it to view details.

2. Video camera

Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in memory card.

Open camera

Press home, touch menu, select camera. Choose video camera mode.

Take Video

1 Aim your object with the screen.

2 Touch the “shutter” button on the screen.

3 After taking video will save to the camera’s gallery folder with the name of taking time and date.

4 You can view the videos by touching the preview box button.

5) Video camera settings

On the bottom right of camera viewfinder mode, display the preview of the previous video or picture.

Images

Open images

Press home touch label of applications then touch Gallery.

Use images

After taking pictures, you can view them and share them with your friends.

View images

1) In the picture interface, touch photo album to view images.

2) Touch the thumbnail to view pictures on full screen.

In the photo album or list, press and hold down the picture towards left to view the next picture, or towards right to view the previous one.

Crop images

In the photos' gallery, press the photo you want to crop, choose Menu and 'Edit' then the instruments for edit will appear.

a. To adjust the trimmer size, press and hold the edge of cutting tool. After the trimmer arrow appears, drag your finger from the center inward or outward, then you can adjust the size.

b. To keep the ratio of the trimmer please press any one of the four corners.

c. To move the trimmer to other areas of the picture, hold down the center of cutting device, then drag your finger to certain position.

Send images via mails

In the images gallery, press the wanted photo then touch share symbol from top-right of the screen. Touch Email when tips appear. Picture will be automatically attached to e-mail. Edit the mail, then touch send.

Use videos

After video taken, you can view it or share it with your friends.

Watch movies

1) In the interface of photos' gallery, touch videos album. You can watch movies after touching the wanted video.

2) Touch the screen, then the play control keys appear.

Music

The phone can play multiple format of digital audio files from memory card.

Open Music

Press home, touch the label of applications, touch music. Then the interface of Music Media appears.

Music Media

Your music files are classified according to the following four categories Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

Continue the operations, until your wanted music appears. Such as if you choose Artists a list of artists sorted by the numbers in English will appear. Choose any on to open the list then all the albums and songs will appear. Select one album, then the songs in it will be played.

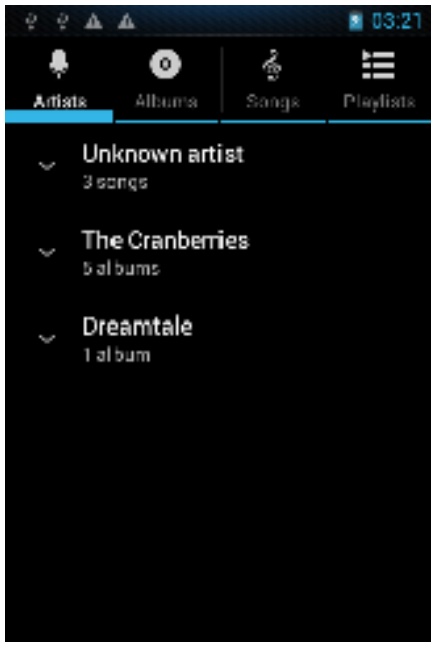

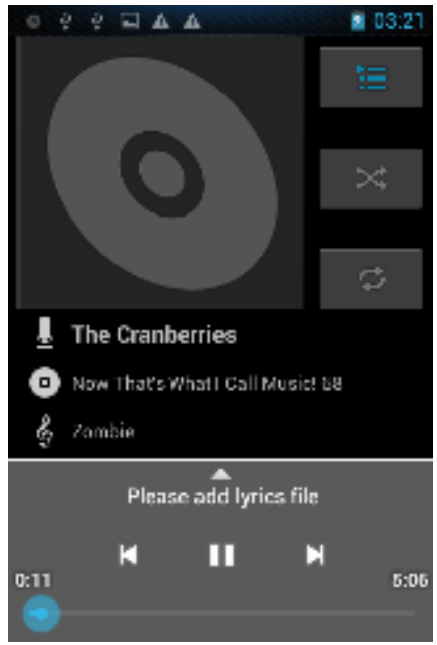

Tips: You can play all of the songs in the interface of music media, in random sequence . Press Menu, and then touch the Party Shuffle. Then will start playing the first song randomly selected . To close the Party Shuffle, press Menu, then touch to turn off the Party Shuffle.

Create a play list

1) Touch any category of music media on the screen.

2) In the list, you can press and slide up and down the screen to browse the artist, album or song that you want to add to the play list.

3) Press the artist, album or song, and then touch the options menu in the play list.

4) In the interface of adding to the play list window, touch the new play list.

5) Enter the new name of the play list, and then touch to save.

Manage the play list

Enter the interface of music media then touch the play list.

1) To play songs of the play list, touch the name of play list.

2) To delete a play list, press and hold the Play list, and then touch Remove.

3) To delete the list of songs, hold down the songs, and then touch play list to delete it.

4) To rename a play list, press and hold the play list, then touch Options menu renamed. Enter the new play list name, and then touch “save".

5) If you want to set the song to the ring tones, and then touch the song as a ring tone. The song will be set as the default ring tone.

Calendar

Enter the calender application

Load Goggles accounts, enter the application, In the interface of month or week will use gray to highlight the day. Display default the date on the current month.

In the interface press menu 4 display modes will appear

1) Schedule Intrface shows a certain schedule(click on the initial time and view forward,click the final time to view backwards)

2) day Interface displays a day's schedule (last clicked date),Slide around to turn page accoring day.

3) week Interface displays a week's schedule (last clicked date),Slide around to turn page accoring week.

4) today Interface displays a day's schedule, In the interface of month or week use gray to highlight the day.

5) month nterface displays a month's schedule (last clicked date) Slide around to turn page accoring month.

New activities

Press the event adding symbol from top-right of the screen.

Enter the name of activity in the activities' box.

1) Enter the event location, description, guests, repeat, remind time.

2) Click Done to return to calendar.

FM Radio

FM Radio

Through this program, you may listen to FM radio on the device, FM radio use the wired headset as an antenna to receive signals, before opening this program ,you can install the original equipment-headphones, when listening, you can switch it manually to speakers or the mode with wired headphones.

Open FM radio

Touch the FM Radio label to open the application of FM radio.

Click the Back button, the radio program move to the background, and you can still continue to listen to programs and other applications run at the same time. Press menu and click exit to exit radio.

Collect the channel you are favorite

Press the menu button in the FM interface,click the “search” ,and then view the channel list,press long one channel ,click “Add to Favorite”to rename the channel.

Settings

Your service provider may default some device settings, so you may not be able to change these settings.

Dual SIM Settings

1) Touch it to choose or to disable the SIM card, the card is grey when disabled, the flight mode displays on status bar.

2) The default SIM card ,you can choose Voice call,Video call,Messaging,Data connection.

WLAN

In Settings, touch WLAN to open. You can search for available networks automatically, networks without password can be used directly, for secured networks you have to enter the password first.

Notice: Open Wi-Fi then the flight mode Wi-Fi will close automatically Open flight mode then connect Wi-Fi it can be used normally.

Bluetooth and Bluetooth setting.

Touch Bluetooth switch to activate. Touch Bluetooth to enter the device searching screen. You can modify settings by pressing the Menu button.

Data usage

Here you can activate or deactivate the data connection and see a chart of data usage status. You can also set the data mobile limit for each SIM.

More

Airplane mode

Virtual Private Networks(VPN)

Tethering & portable hotspot

WLAN Direct

Mobile network enter “mobile network settings”which include:

a. 3G service

b. Access Point Names

c. Network operators.

GPRS transfer prefer mode

Audio Profiles

This option gives the phone tones settings under the status of receiving calls or notification. Including Vibration, volume, ring tones, ring tones notification and feedback Button operation tone, select Sound, screen lock tone, touch .To adapt every environment.

1.Select General / Silent / Meeting / Outdoor. Touch the spot on the right, when turns blue , it's activated.

2.Touch a profile to access personalization options.

In the "Voice call ringtone" you can select distinct ringtone for each sim card.

Display

a. Brightness Adjust the brightness

b.Wallpaper Change the wallpaper picture

c. Auto-rotate screen Rotate phone to change direction

d. Sleep Adjust the delay before the screen automatically locks

e. Font size

Storage

1) View SD Card and Phone Memory.

2) Erase storage.

Battery

Displays informations about the charging status and usage.

Apps

Shows the list of the installed and downloaded applications, wich of them are installed on SD CARD and wich are running in background.

Accounts & sync

Manage and change syncronization options for the used accounts.

Location services

Google location service: let applications to use the WiFi connection to get localization.

GPS satellites

GPS EPO assistance

A-GPS: use mobile network data to speed up the location time.

Security

1) Set up screen locks Use slide, images PIN or password to lock the screen.

a. Touch“pattern”, the first time there will be a simple unlock instructions and examples, click “next step” to continue the step“make the unlocking image”

b. Touch PIN Enter PIN numbers to unlock the screen.

c. Touch password Set password to unlock the screen.

d. Touch “no” Stop this application.

2) Set up SIM card lock Enter 4-8numbers PIN to set the lock of SIM.

SIM card PIN (Personal Identification Number) is to prevent unauthorized use of SIM cards.PIN code provided with SIM. The service provider gives the initial value.

Change a blocked PIN code, you need to open the "SIM Lock ", then go to Change Password screen, the phone will automatically prompt enter the old PIN code and asked to enter a new PIN code twice,finally the phone will prompt that change the code successfully. If you enter the PIN with error for three times, SIM card PIN codes will be automatically locked, PUK codes is usually supplied with SIM card. If no, you should go to the service provider for the codes.

If you enter 10 times wrong PUK code, the SIM card will be permanently locked.

3) Password visible Password visible when enter it

4) Select device administration Add or delete device manager.

5) Unknown sources: install apps from unknown sources

6) Trusted credentials: show the trusted credentials

7) Install from SD card Install the encrypted certificate from SD card.

Language & input

1) Selecting Language Include all the languages on the phone and totally amount of 12 kinds.

2) Personal Dictionary Add words to custom dictionary or delete.

3) Input method you can select Android keyboard or MultiLing keyboard input method.

Speech Input and Output Settings

4) Text to speech settings

5) Pointer speed

Reset to factory setting

Backup My Data. Backup my settings and data of other applications.

Factory data reset. The system will restore settings or other backup data after a certain application is Installed.

Date & Time

1) Automatic date & time: Use date and time provided by Network or by GPS

2) Set Date / Set time: touch to set date / time.

3) Select Time Zone according to where you are.

4) Use 24-Hour Format: ON/OFF

5) Select Date Format

Schedule power on/off

You can set time of boot or shutdown by touching it. You may also select to repeat it or a certain day during a week.

Schedule airplane on/off

You can set the time of activating or deactivting the plane mode.

Accessibility

1.Power button ends call

2.Touch and hold delay

3.Install web scripts

Developer options

1.USB debugging

2.Stay awake

3.Allow mock locations

4.Strict mode enabled

5.Pointer location

6.Show touches

7.Show screen updates

8.Show CPU usage

9.Force GPU rendering

10.Show all ANRs

About phone

You can check the information on status bar and remaining power.

Notices for the use of phone

Your phone is a product of superior design and craftsmanship and should be treated with care. The following suggestions can help you comply with the terms of repair kits, to extend the life of mobile phone.

Place the mobile phone and their parts and components out of reach of small children.

Keep the phone dry, rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.

Don't touch the phone with wet hands when charging, it will cause electric shock or damage the phone.

Avoid place the device in high temperature environment. Temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

Avoid place the device in too low temperature environment. When the temperature rises, the phone will produce water vapor that may damage electronic circuit.

Avoid place the phone in dusty, dirty places, otherwise parts may be damaged.

To avoid the phone in a lit cigarette, near open flame or any heat source.

Do not open the device, non-professional approach will do damage to the phone.

Do not throwit from height, knock or shake the phone, rough handling can damage internal circuit boards.

Do not paint the phone, because the paint will block headphones, microphones or other removable parts, and lead it not work.

Use clean, soft, dry cloth to clean the camera, light sensor lenses. Prohibit the use of harmful chemicals and cleaning agents, cleaning fluids to clean the phone

If mobile phone, battery, charger, or mobile phone accessories are defective, send to the nearest qualified service center for inspection.

I necessarily, Service Centre staff will assist you and will arrange for phone repairs.

Specifications

General	Network	2G: 850/900/1800/1900 MHz (SIM1, SIM2); 3G: UMTS 900/2100 MHz (SIM1)
	Dual SIM. Dual Stand-by	Yes
Dimensions	Dimensions	125*64*11.2 mm
	Weight	162,2 g
Display	Type	TFT-LCD
	Touchscreen	Touchscreen Capacitive, Multitouch
	Dimensions	3,95"
	Resolution	480x320 px, 160dpi
Characteristics	OS	Android 4.0.4 Ice Cream Sandwich
	CPU	Cortex-A9, 1GHz
	GPU	PowerVR SGX 531/OpenGL ES 2.0
	GPS	Yes
	AGPS	Yes
	3G video call	Yes
	Language	Romanian, English, German, Spanish, French, Russian, Italian
	Flash memory	2GB free

	RAM memory	512 MB
	External memory	Up to 32GB with microSD card
	Widget	Yes
	Multitasking	Yes
	FM Radio	Yes, with RDS
	Turn to Mute	Yes
	Vibrate when you accept call	Yes
Sound	3.5mm jack	Yes
	Amplifier	Yamaha audio amplifier
	Speaker	Yes
	Audio files play	Yes
	Alert type	Vibrations, audio ringtone
Video	Video render	HD video files 1280x720p
	Internet video render	HD 720p
Applications	ES File Explorer, News, Stunel, ES Task Manager, Bit Defender, Manager teme, Office Suite Viewer, Gameloft Live	
Camera	Main camera	3,2 MP, 2560 x 1920 px
	Front camera	VGA 0,3 MP
	Video recording	864x480@12,5fps
	Geotagging	Yes
Data	3G	HSDPA 7,2 Mbps si HSUPA 5,4 Mbps

	EDGE	Yes, Class10
	GPRS	Yes, Class 12
	Bluetooth	3.0 with A2DP and EDR
	WLAN	WiFi 802.11 b/g/n
	WLAN Direct	Yes
	VoIP	Yes
	USB	Yes 2.0, micro USB
Sensors	G-sensor	Yes
	Proximity sensor	Yes
	Light sensor	Yes
	Compass	Yes
Internet	Social networking	Yes
	E-mail	Yes
	Applications	Yes
	Hotspot	Thetering Wi-Fi
Battery	Capacity	Li-Polymer 1700 mAh
	Charger type	DC 5V, 500mA
	Stand by	240h
	Call time	300min
Package content	Mobile phone, user manual, warranty card, charger, earphones, USB data cable	

DECLARATION OF CONFORMITY
Nr. 1236

We, SC VISUAL FAN SRL, importer located in Brasov, 16 Liliacului STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.5 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that:

The product P5 Mini – mobile phone ALLVIEW brand - and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;
- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 610000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;
- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303).
- The safety requirements of the European Directive 2001/95/EC and of EN standards 60065:2002/A12:2011 and EN 60950-1:2006/A12:2011, of the decibels level emitted by the sold devices.

The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;
- Safety EN 6095-1;
- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.

Also available on web:"http://allview.ro"

CE 0678

SAR value: 0,962 W/kg

Director

COTUNA GHEORGHE